



[Knowledge Base](#) > [Handsets and Device Provisioning](#) > [Grandstream - Manual Provisioning](#)

## Grandstream - Manual Provisioning

Mike Johnstone - 2026-02-03 - [Handsets and Device Provisioning](#)

### Grandstream - Configuring your phone

#### Quick Guide to Grandstream


##### On the Grandstream

- Retrieve the phones IP address > select the Settings button (highlighted below)
- Status | Network Status | Ethernet | IPV4 address



##### On your PC

- Open your web browser.
- In a new tab, type `http://[IP address found on the phone]` to access the web admin interface

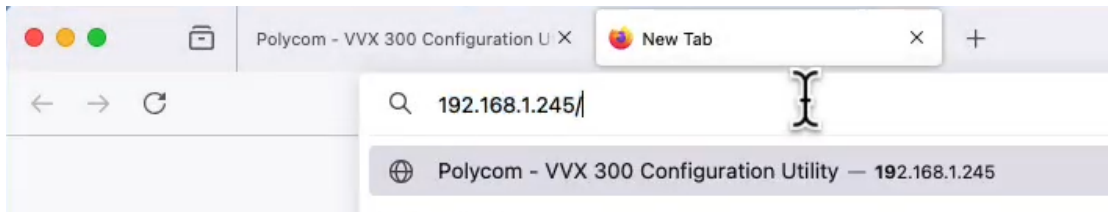

- You will be redirected to the access page



- User and password: "admin".
- Go to Account Status > Account 1

### Ext tabs

All the main settings required to configure your Grandstream's are accessed within the Ext tabs. Complete:

## 1. General Setting

General Settings SIP Settings Codec Settings Call Settings Advanced Settings Dial Plan Hidden Number Plan Feature Codes

**Account Register**

Account Active

Account Name

SIP Server

Secondary SIP Server

Outbound Proxy

Secondary Outbound Proxy

SIP User ID

SIP Authentication ID

SIP Authentication Password

Name

Tel URI

Voicemail Access Number

BLF Server

- Activate Account: Enable
- Account Name: Can phone and owner name (eg Sally)
- SIP user ID: Phone number
- SIP Auth ID: Phone number
- SIP server: plus.2talk.com
- SIP Auth Password: Password assigned to the number.

**How do I assign a password to my number?**

- [Login to your account.](#)
- Go to the Numbers and Features > Switchboard.
- Select the desired Number >
- Under Profile tab go to Number Settings >
- Turn on Restricted
- Add Password > Save

## 2. SIP setting (tab)

- SIP Registration: Enable

- Subscribe Exp: 60
- SIP Transport: TLS
- Local SIP port: 5061