



## Grandstream - Manual Provisioning

Mike Johnstone - 2024-10-27 - Handsets and Device Provisioning

# Grandstream - Configuring your phone

### Quick Guide to Grandstream

In addition to the Grandstream ATA 80x we now support Grandstreams latest GRP handsets via our device provisioning.

- Retrieve the phones IP address > select the Settings button (highlighted below)
- Status | Network Status | Ethernet | IPV4 address
- Advanced settings: in browser type <http://<address>> to access web admin mode.



### Select Settings

Status  
Network Status  
Ethernet  
IPV4 Address

## Ext tabs

All the main settings required to configure the Cisco SPA's are accessed within the Ext tabs. Complete:

### 1. General Setting

- Activate Account: Enable
- Account Name: Can phone and owner name (eg Sally)
- SIP user ID: Phone number
- SIP Auth ID: Phone number
- SIP server: call.sipcity.com.au

### 2. SIP setting (tab)

- SIP Registration: Enable
- Subscribe Exp: 60
- SIP Transport: TLS
- Local SIP port: 5061

## Accounts

Account 1

Account 2

Account 3

Account 4

Account 5

Account 6

General Settings

SIP Settings

Codec Settings

Call Settings

Advanced Settings

Dial Plan

Hidden Number Plan

Feature Codes

### Account Register

Account Active [?](#)

Account Name [?](#)

SIP Server [?](#)

Secondary SIP Server [?](#)

Outbound Proxy [?](#)

Secondary Outbound Proxy [?](#)

SIP User ID [?](#)

SIP Authentication ID [?](#)

SIP Authentication Password [?](#)

Name [?](#)

Tel URI [?](#)

Voicemail Access Number [?](#)

BLF Server [?](#)

Account Display [?](#)

UCM User Password [?](#)