



Grandstream Manual setup

Mike Johnstone - 2024-10-27 - Handsets and Device Provisioning

Grandstream - Configuring your phone

Quick Guide to Grandstream

In addition to the Grandstream ATA 80x we now support Grandstreams latest GRP handsets via our device provisioning.

- Retrieve the phones IP address > select the Settings button (highlighted below)
- Status | Network Status | Ethernet | IPV4 address
- Advanced settings: in browser type <http://<address>> to access web admin mode.



1. General Setting

- Activate Account: Enable
- Account Name: **Can phone and owner name (eg Sally)**

- SIP user ID: **Phone number**
- SIP Auth ID: **Phone number**
- SIP server: **call.sipcity.com.au**

2. SIP setting (tab)

- SIP Registration: **Enable**
- Subscribe Exp: **60**
- SIP Transport: **TLS**
- Local SIP port: **5061**

Accounts

Account 1
Account 2
Account 3
Account 4
Account 5
Account 6

[General Settings](#)
[SIP Settings](#)
[Codec Settings](#)
[Call Settings](#)
[Advanced Settings](#)
[Dial Plan](#)
[Hidden Number Plan](#)
[Feature Codes](#)

Account Register

Account Active ?	<input checked="" type="checkbox"/>
Account Name ?	<input type="text" value="19497993303"/>
SIP Server ?	<input type="text" value="call.sipcity.com.au"/>
Secondary SIP Server ?	<input type="text"/>
Outbound Proxy ?	<input type="text"/>
Secondary Outbound Proxy ?	<input type="text"/>
SIP User ID ?	<input type="text" value="19497993303"/>
SIP Authentication ID ?	<input type="text" value="19497993303"/> ⋮
SIP Authentication Password ?	<input type="password" value="....."/> ⋮ 🔑
Name ?	<input type="text" value="GD 3303"/> ⋮
Tel URI ?	<input type="text" value="Disabled"/> ▼
Voicemail Access Number ?	<input type="text"/>
BLF Server ?	<input type="text"/>
Account Display ?	<input type="text" value="Username"/> ▼
UCM User Password ?	<input type="password"/> ⋮ 🔑