



Grandstream - Manual Provisioning

Mike Johnstone - 2024-10-27 - Handsets and Device Provisioning

Grandstream - Configuring your phone

Quick Guide to Grandstream

In addition to the Grandstream ATA 80x we now support Grandstreams latest GRP handsets via our device provisioning.

- Retrieve the phones IP address > select the Settings button (highlighted below)
- Status | Network Status | Ethernet | IPV4 address
- Advanced settings: in browser type <http://<address>> to access web admin mode.



Select Settings

Status
Network Status
Ethernet
IPV4 Address

Ext tabs

All the main settings required to configure the Cisco SPA's are accessed within the Ext tabs. Complete:

1. General Setting

- Activate Account: Enable
- Account Name: Can phone and owner name (eg Sally)
- SIP user ID: Phone number
- SIP Auth ID: Phone number
- SIP server: call.sipcity.com.au

2. SIP setting (tab)

- SIP Registration: Enable
- Subscribe Exp: 60
- SIP Transport: TLS
- Local SIP port: 5061

Accounts

Account 1

Account 2

Account 3

Account 4

Account 5

Account 6

General Settings

SIP Settings

Codec Settings

Call Settings

Advanced Settings

Dial Plan

Hidden Number Plan

Feature Codes

Account Register

Account Active [?](#)

Account Name [?](#)

SIP Server [?](#)

Secondary SIP Server [?](#)

Outbound Proxy [?](#)

Secondary Outbound Proxy [?](#)

SIP User ID [?](#)

SIP Authentication ID [?](#)

SIP Authentication Password [?](#)

Name [?](#)

Tel URI [?](#)

Voicemail Access Number [?](#)

BLF Server [?](#)

Account Display [?](#)

UCM User Password [?](#)