



## Manually Provision a Yealink phone

Santiago Garcia - 2024-04-08 - Yealink Devices

# Manually Provision a Yealink phone

### Access Yealink Phone's Web UI

1. Phone's web UI: to access the phone's web UI press the **OK** button (on the right of the keypad) to retrieve the phone's IP address.
2. Enter the **IP address** on your browser (eg 192.168.1.xx).
3. **Username** and **Password**: admin/admin.
4. Click **Confirm**.

### Account Tab

1. Select the Account tab. (or another unused account if Account 1 is in use).
2. Account Active: **Enable**
3. Label: **Your Name**
4. Display Name: Displays on your telephone phone screen when idle.
5. Register Name: **Full DID** eg 13106341780
6. User Name: **Full DID** eg 13106341780
7. Password: **account password** or the restricted line password – can be found on your account's switchboard.
8. SIP Server: **plus.2talk.com**
9. Port: **5061**
10. Transport: **TLS**
11. Confirm: to **Save**



Etiquetas

Device

Yealink